

## + Outline

By using WarpEngineZFX, the application program of ZFX-C1\*/c2\* can be up-loaded.


## + Preparation

Please connect PC with ZFX via USB.

## + Operation procedure

1. Please prepare the application program of ZFX-C1\*/C2\*.
2. Start up WarpEngine.  
The ZFX controller changes into the hard check mode.  
The current version of application program is displayed. (Figure 1)
3. Push the bottom "Loading file".  
The file selection screen is displayed, and select the application program file.
4. The information of the application program is displayed. (Figure 2)  
Push the bottom "Start upgrade".
5. If the message of "Different model, continue?" is displayed, please push "OK". (Figure 3)
6. Notes are displayed, push "OK". (Figure 4)
7. The following data is up-loaded.  
The progress bar is displayed. (Figure 5)
  - Application program for CPU
  - Application program for DSP
  - FPGA data
  - Font data
8. When processing ends, the message is displayed. (Figure 6)  
Please reactivate ZFX controller.


Figure 1

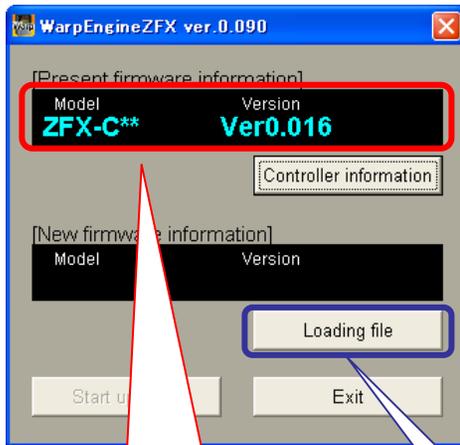

The version of application program is displayed.

Step3

Figure 2

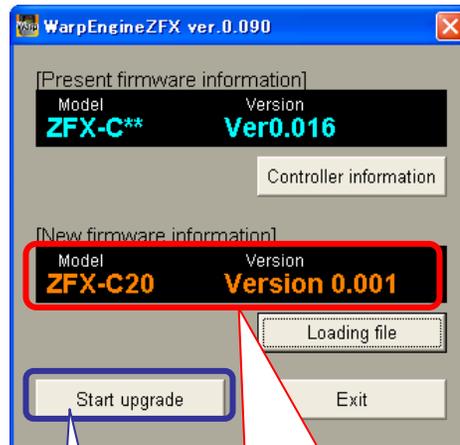

The version of selected file is displayed.

Step4

Figure 3

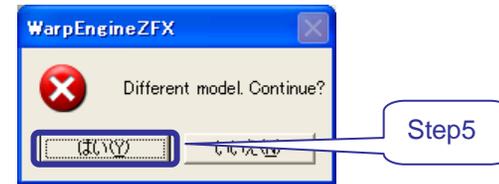


Figure 4


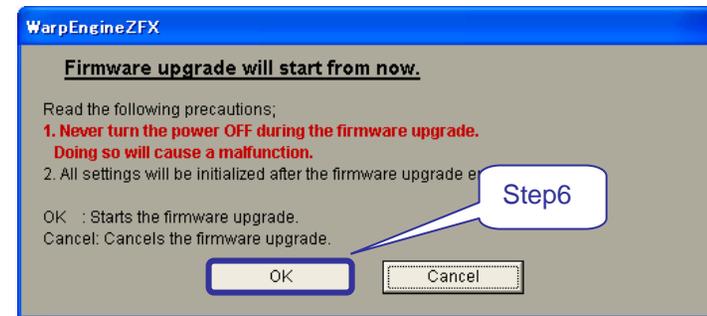


Figure 5



<Caution>  
It takes about 30-120 seconds until each processing is ended.

Figure 6

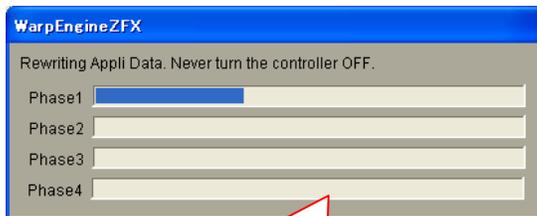