

TABLE OF CONTENTS

Preface
Conventions Used in This Manual
Meanings of Abbreviations
How to Read Display Symbols
“Reference” mark
How This Manual is Organized
Precautions on Safety
CHAPTER 1 INTRODUCTION
This chapter introduces the names of parts on the E5AK-T and their functions.
For details on how to use the controller and parameter settings, see Chapter 2 onwards.
1.1 Names of parts
Main parts
Front panel
About the displays
How to use keys
1.2 Input and Output
Input
Output
1.3 Program
How programs are structured
Program operation
Alarm output
Program output
1.4 Parameters and Menus
Parameter types
Selecting modes
Selecting parameters
Fixing settings
1.5 About the Communications Function
1.6 About Calibration
CHAPTER 2 PREPARATIONS
This chapter describes the operations (e.g. setup, installation and wiring) you should carry out before turning the E5AK-T ON.
2.1 Setup
Draw-out
Setting up the output unit
Setting up the option unit
2.2 Installation
Dimensions
Panel cutout
Mounting
2.3 Wiring Terminals
Terminal arrangement

Precautions when wiring
Wiring

CHAPTER 3 BASIC OPERATION

This chapter describes actual examples for understanding the basic operation of the E5AK-T.
3.1 Convention Used in this Chapter
3.2 Setting Input Specifications
Input type
Temperature input
Analog input
3.3 Setting Output Specifications
Output assignments
Direct/reverse operation
Control period
3.4 Setting Alarm Type
Alarm type
Alarm value
Alarm hysteresis
Close in alarm/open in alarm
3.5 Setting Patterns
Pattern No.
Number of steps
Step SP/Step time
Alarm value
3.6 Protect Mode
Security
Key protect
3.7 Starting and Stopping Operation
3.8 Adjusting Control Operation
Changing currently running programs
Manual operation
Auto-tuning (A.T.)

CHAPTER 4 APPLIED OPERATION

This chapter describes each of the parameters required
for making full use of the features of the E5AK-T.

Read this chapter while referring to the parameter
descriptions in chapter 5.

4.1 Selecting the Control Method
Heating and cooling control
Position-proportional control
ON/OFF control
4.2 Operating Condition Restrictions
Manipulated variable restrictions
Set point limiter
4.3 Ramp Rise Rate Setup Program
Running the ramp rise rate setup program
Program example
4.4 Program Operation

Hold/advance
Pattern operation
4.5 Wait Operation
4.6 Program output
Time signal
Program status
4.7 Setting Running Conditions
Operation at power ON
Starting the program run
End condition
4.8 How to Use Event Input
Input assignments
Detailed description of input functions
4.9 How to Use the Heater Burnout Alarm
Heater burnout detection
Operating conditions
How to calculate the heater burnout set value
4.10 LBA
4.11 How to Use Transfer Output

CHAPTER 5 PARAMETERS

This chapter describes the parameters of the E5AK-T.
Use this chapter as a reference guide
Conventions Used in this Chapter
The meaning of icons used in this chapter
About parameter display
About the Order in Which Parameters Described in This Chapter

Protect Mode
Manual Mode
Level 0 Mode
Program Mode
Level 1 Mode
Level 2 Mode
Setup Mode
Expansion Mode
Option Mode
Calibration Mode

CHAPTER 6 USING THE COMMUNICATIONS FUNCTION

This chapter mainly describes communications with a host computer
and communications commands.

6.1 Outline of the Communications Function
Outline
Transfer procedure
Interface
6.2 Preparing for Communications
Cable connections
Setting the communications specifications
6.3 Command Structure
6.4 Commands and Responses

Reading/writing parameters
Issuing special commands
Reading/writing program parameters
6.5 How to Read Communications Error Information
End code
Undefined error
6.6 Program Example
How to use programs
Program list (language: IBM PC Compatible Machine)
Examples of use
CHAPTER 7 CALIBRATION
This chapter describes procedures for each calibration operation.
Read this chapter only when the controller must be calibrated.
7.1 Parameter Structure
7.2 Calibrating Thermocouples
7.3 Calibrating Platinum Resistance Thermometers
7.4 Calibrating Current Input
7.5 Calibrating Voltage Input
7.6 Checking Indication Accuracy
Checking indication accuracy
CHAPTER 8 TROUBLESHOOTING
This chapter describes how to find out and remedy
the cause if the E5AK-T does not function properly.
Remedy E5AK-T trouble in the order of the descriptions
in this chapter
8.1 Initial Checks
8.2 How to Use the Error Display
8.3 How to Use the Error Output
8.4 Checking Operation Restrictions
APPENDIX .
SPECIFICATIONS
Ratings
Characteristics
Sensor Input Setting Ranges and Indication Ranges
Output Unit Ratings and Characteristics
Option Unit Ratings and Characteristics
ABOUT CURRENT TRANSFORMER (CT)
CONTROL BLOCK DIAGRAM
Standard type
Position-proportional type
SETTING LIST
MODEL LIST
PARAMETER OPERATIONS LIST
ASCII CODE LIST