

# TABLE OF CONTENTS

<b>PRECAUTIONS .....</b>
1 Safety Precautions .....
2 General Precautions .....
<b>SECTION 1</b>
<b>Introduction .....</b>
1-1 Features .....
1-2 Measurement Modes .....
1-2-1 Color Pickup and Color Filter Modes .....
1-2-2 Additional Color Filter Mode .....
1-3 Menu Trees .....
<b>SECTION 2</b>
<b>Basic Operations .....</b>
2-1 Menu Operations .....
2-1-1 Screen Displays .....
2-1-2 Input Devices .....
2-1-3 Menu Tree .....
2-1-4 Inputting Values .....
2-1-5 Drawing Measurement Regions .....
2-2 Starting and Quitting .....
2-2-1 Starting .....
2-2-2 Selecting Scene Modes .....
2-2-3 Changing Scenes .....
2-2-4 Copying and Clearing Scenes .....
2-2-5 Quitting .....
<b>SECTION 3</b>
<b>Settings .....</b>
3-1 Adjusting Images .....
3-1-1 Shutter Speed .....
3-1-2 Applying Color Filters .....
3-1-3 Creating a Color Filter .....
3-1-4 Picking Up Measurement Colors .....
3-1-5 Filtering .....
3-1-6 Background Suppression .....
3-1-7 Output Calibration .....
3-2 Position Compensation .....
3-2-1 Adjusting Images for Easier Position Compensation .....
3-2-2 Setting Position Compensation Regions .....
3-2-3 Searches .....
3-2-4 Position Compensation using Edges .....
3-2-5 Area and Center of Gravity, and Center of Gravity and Axis Angle .....
3-3 Measurement Methods .....
3-3-1 Measurement Regions .....
3-3-2 Surface Defects .....
3-3-3 Searches .....
3-3-4 Edge Processing .....
3-3-5 Area and Center of Gravity, and Center of Gravity and Axis Angle .....
3-4 Expressions .....
<b>SECTION 4</b>
<b>Checking and Executing Measurements .....</b>
4-1 Checking Measurements .....

# TABLE OF CONTENTS

4-1-1	Adjusting Evaluation Criteria while Viewing Measurements .....
4-2	Measuring .....
4-2-1	Adjusting Evaluation Criteria during Measurement .....
<b>SECTION 5</b>	
<b>System Settings .....</b>	
5-1	White Balance .....
5-2	Output Destination .....
5-3	Backup .....
5-3-1	Operations Using the F400 .....
5-3-2	Operation Examples for the Personal Computer .....
5-4	Display Settings .....
5-4-1	Measurement Screen Settings .....
5-4-2	Changing the Display Image .....
5-5	Key Allocation .....
5-6	Startup Mode .....
5-7	Error Settings .....
5-8	Version .....
<b>SECTION 6</b>	
<b>Communications with External Devices .....</b>	
6-1	Terminal Blocks .....
6-1-1	I/O Format .....
6-1-2	Terminal Signal Operation and Timing .....
6-1-3	Setting Communications (Terminal Block) .....
6-2	RS-232C Port .....
6-2-1	Flowcharts .....
6-2-2	Setting Communications (RS-232C) .....
6-2-3	Input Command List .....
6-2-4	I/O Format .....
<b>SECTION 7</b>	
<b>Troubleshooting .....</b>	
<b>Glossary .....</b>	
<b>Revision History .....</b>	