


4-2 Setting Mode

4-2-1 Selecting Setting Mode


- The K3NR in RUN mode will go into setting mode if the Mode Key is pressed for 1 s minimum.
- The K3NR in setting mode will go into RUN mode if the Escape Key is pressed.

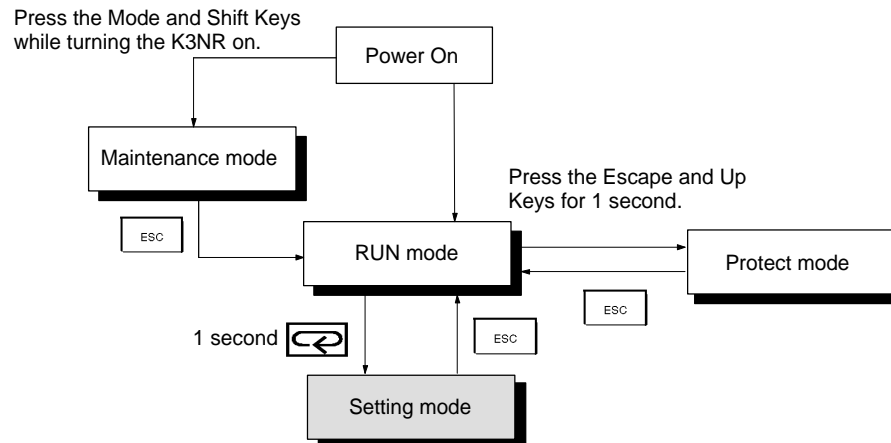

- The menu in each mode changes whenever the Mode Key is pressed.
- If the Mode Key is pressed for more than one second while a menu is displayed, a parameter will be displayed.
- The parameter changes whenever the Mode Key is pressed.
- If the Shift Key is pressed while a parameter is displayed, the parameter will be ready to change.
- Press the Up Key to change parameters.
- The digit of a set value is selected with the Shift Key and changed with the Up Key.
- The PROG indicator is lit while a menu or parameter is displayed.
- The PROG indicator flashes during a set value change.

Note If the operating mode is changed, all the other parameters will be set to default values except communication setting and set values in protect mode. Therefore, set the operating mode and sensor type first.

4-2-2 Menu Overview

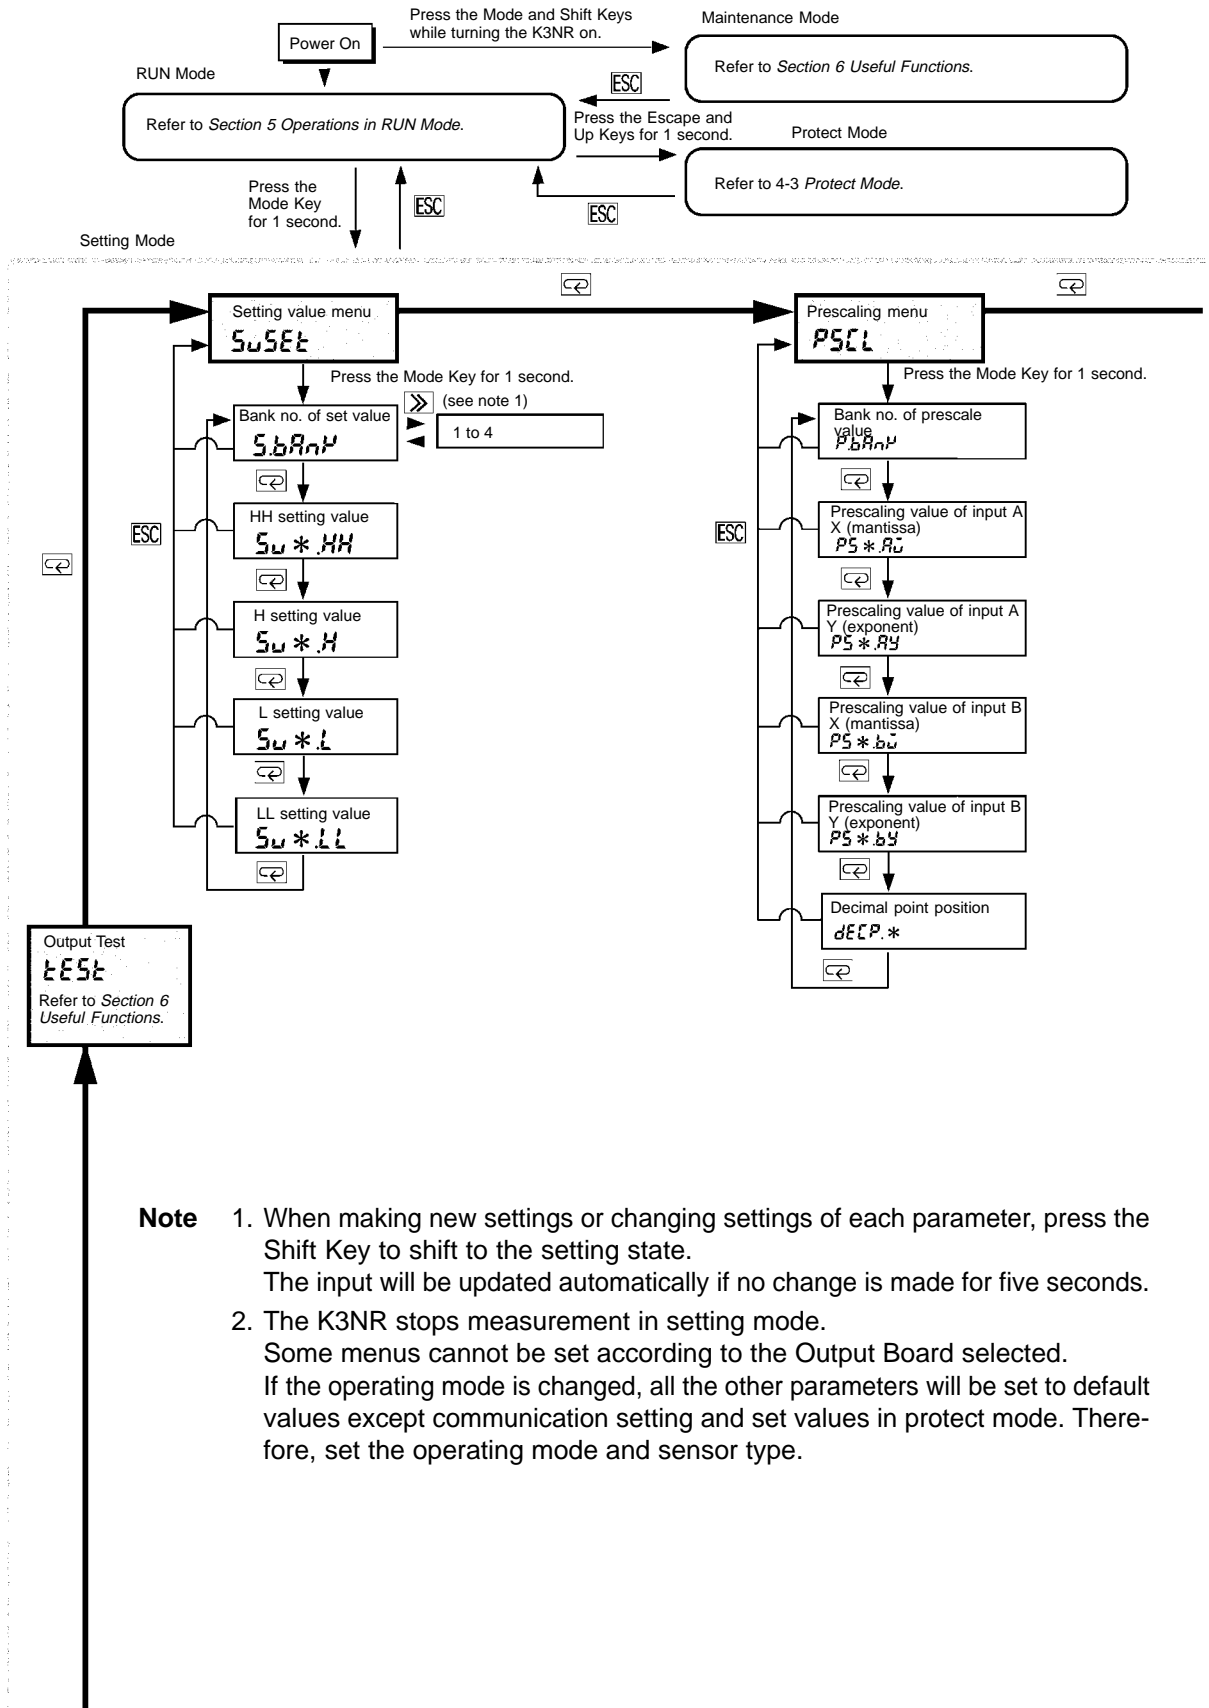

- Note**
- When making new settings or changing settings of each parameter, press the Shift Key to shift to the setting state.
The input will be updated automatically if no change is made for five seconds.
 - The K3NR stops measurement in setting mode.
Some menus cannot be set according to the Output Board selected.
If the operating mode is changed, all the other parameters will be set to default values except communication setting and set values in protect mode. Therefore, set the operating mode and sensor type.

