


# Resetting Maximum and Minimum Values

- The maximum and minimum values are reset when the K3NV is turned on, set to RUN mode, or reset.
- The K3NV will be reset when one of the following is performed.
  - The RESET/TEACH Key is pressed for more than one second while the maximum or minimum value is displayed.
  - The external RESET input signal is turned ON.
  - The K3NV receives the reset command through communications.
- When the K3NV is reset, the maximum and minimum values are set to the process value.


**Note** The K3NV cannot be reset with the RESET/TEACH Key if the maximum/minimum value clear prohibit is ON in protect mode.

## SETTING EXAMPLE


1, 2, 3... The process value 401 is displayed.

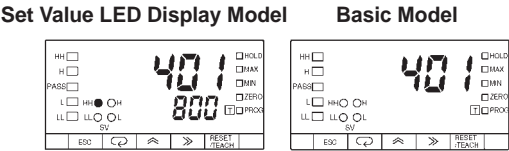

Press the Escape Key to display the maximum value 1024 and light the MAX indicator.

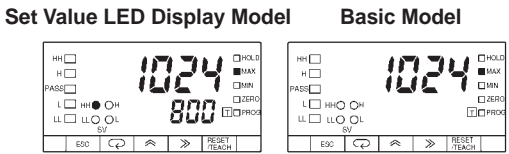

Press the RESET/TEACH Key to set the maximum and minimum values to the process value 401.

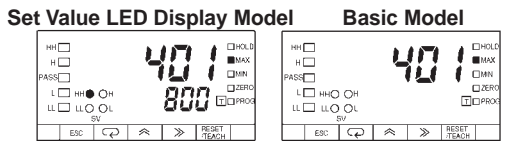

Press the Escape Key to check that the minimum value is set to 401.

