

## 1-3 Rear of the Meter

Terminal arrangement varies depending on the selected Output Board.


For wiring, refer to *Section 2 Setup*.

**K3NR with Relay Output Board, K31-C1, -C2, -C5**


**K3NR with Transistor Output Board, K31-T1, -T2**

**K3NR with Linear Output Board, K31-L1, -L2, -L3, -L4, -L5, -L6, -L7, -L8, -L9, -L10**


**K3NR with RS-485 Output Board, K31-FLK2, -FLK5**

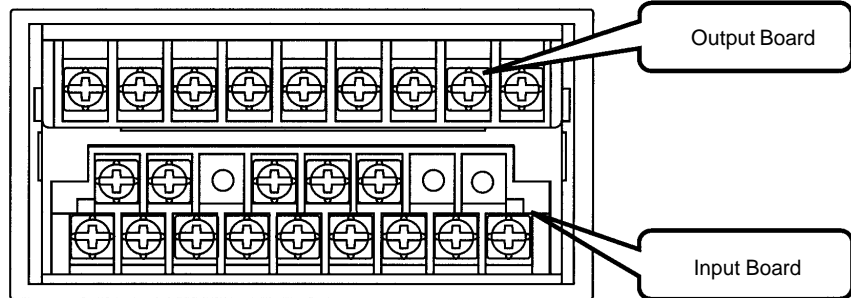


**K3NR with BCD Output Board, K31-B2, -B4**

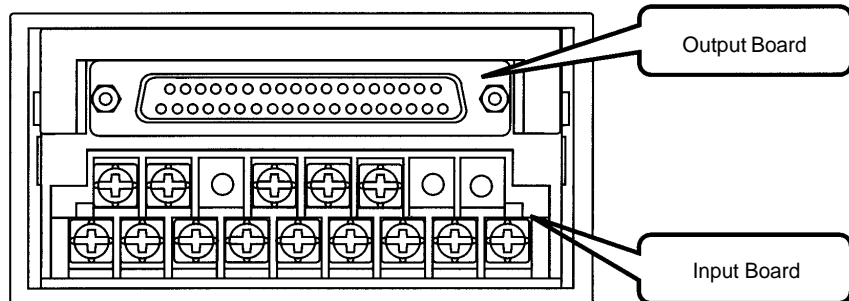

**K3NR with RS-232C Output Board, K31-FLK1**

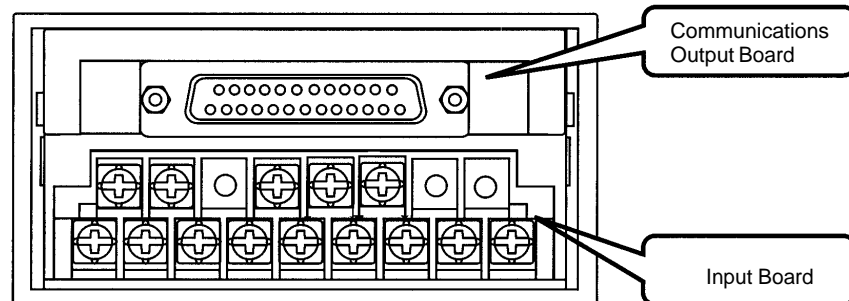

**K3NR with RS-422 Output Board, K31-FLK3**

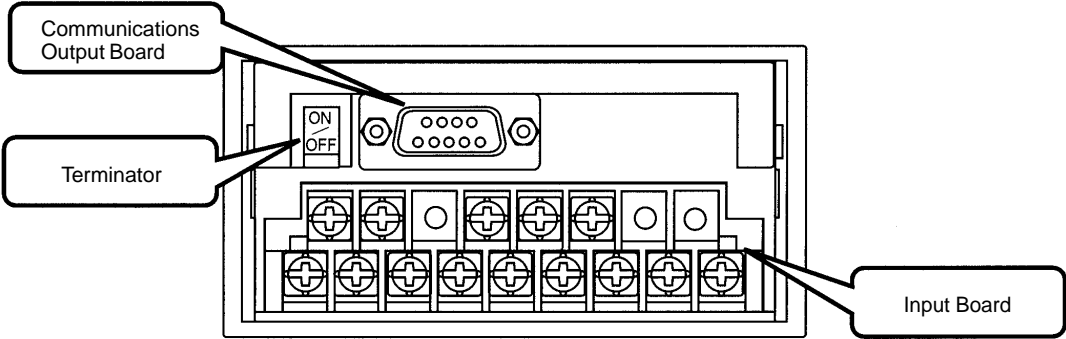

**K3NR with RS232C + Transistor Output Board, K31-FLK4**  
**K3NR with RS-422 + Transistor Output Board, K31-FLK6**

