


Reset Control (Maximum/Minimum Value Reset)

The same operation resulting from input to the reset terminal is executed through communication.


The reset control for the K3NC functions as a reset for the measured values.

Command Format

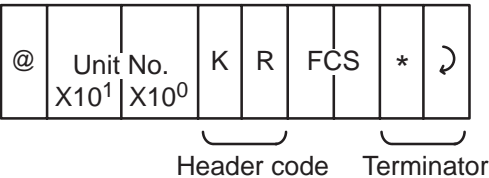

Response Format

Response at normal end. End code: "00"

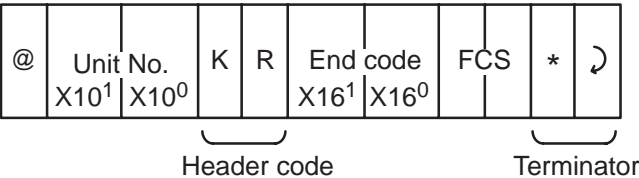

When this command ends normally, a reset is performed.