



6-3-2 Initialization

Follow the steps described below to reset the set values of the K3NR to factory-set values.

- 1, 2, 3...** 1. Press the Mode and Shift Keys simultaneously while turning the K3NR on. The mant maintenance mode setting will be displayed.

Set Value LED Display Model



Basic Model



2. Press the Mode Key for more than one second. The re-in initialization setting will be displayed.

Set Value LED Display Model



Basic Model

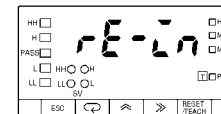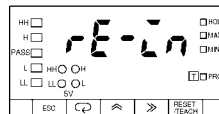

3. Press the Up Key to display no.

Set Value LED Display Model



Basic Model

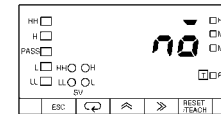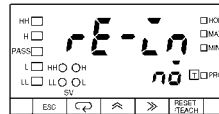

4. Press the Up Key to display yes. Press the Mode Key to initialize all set values. The K3NR will go into RUN mode.

Set Value LED Display Model

Basic Model

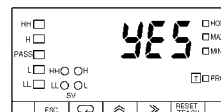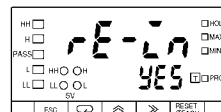

RUN mode