


List of Optional Accessories

Link Adapters


B500-AL001

Three RS-422 adapters for RS-422 line distribution.

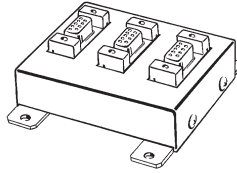

B500-AL004


One RS-232C adapter and two RS-422 adapters for RS-232C and RS-422.

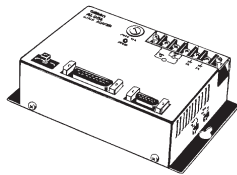


Connectors

XM2A-0901, XM2A-2501, XM2D-0901 (Plug)

D-sub connector. Use in combination with a Hood.



XM2S-0911, XM2S-2511, XM2D-0911 (Hood)

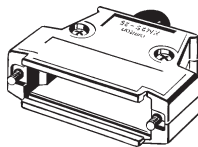

Optical Link Adapter

Z3RN

To extend RS-232C line.

