


# Display Value (PV Value) Read


Reads display value (PV value).

## Command Format

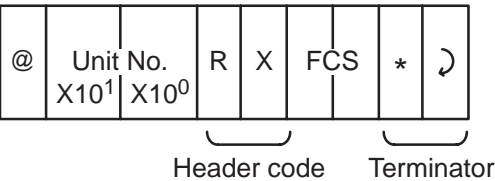

## Response Format

Response at normal end. End code: "00"

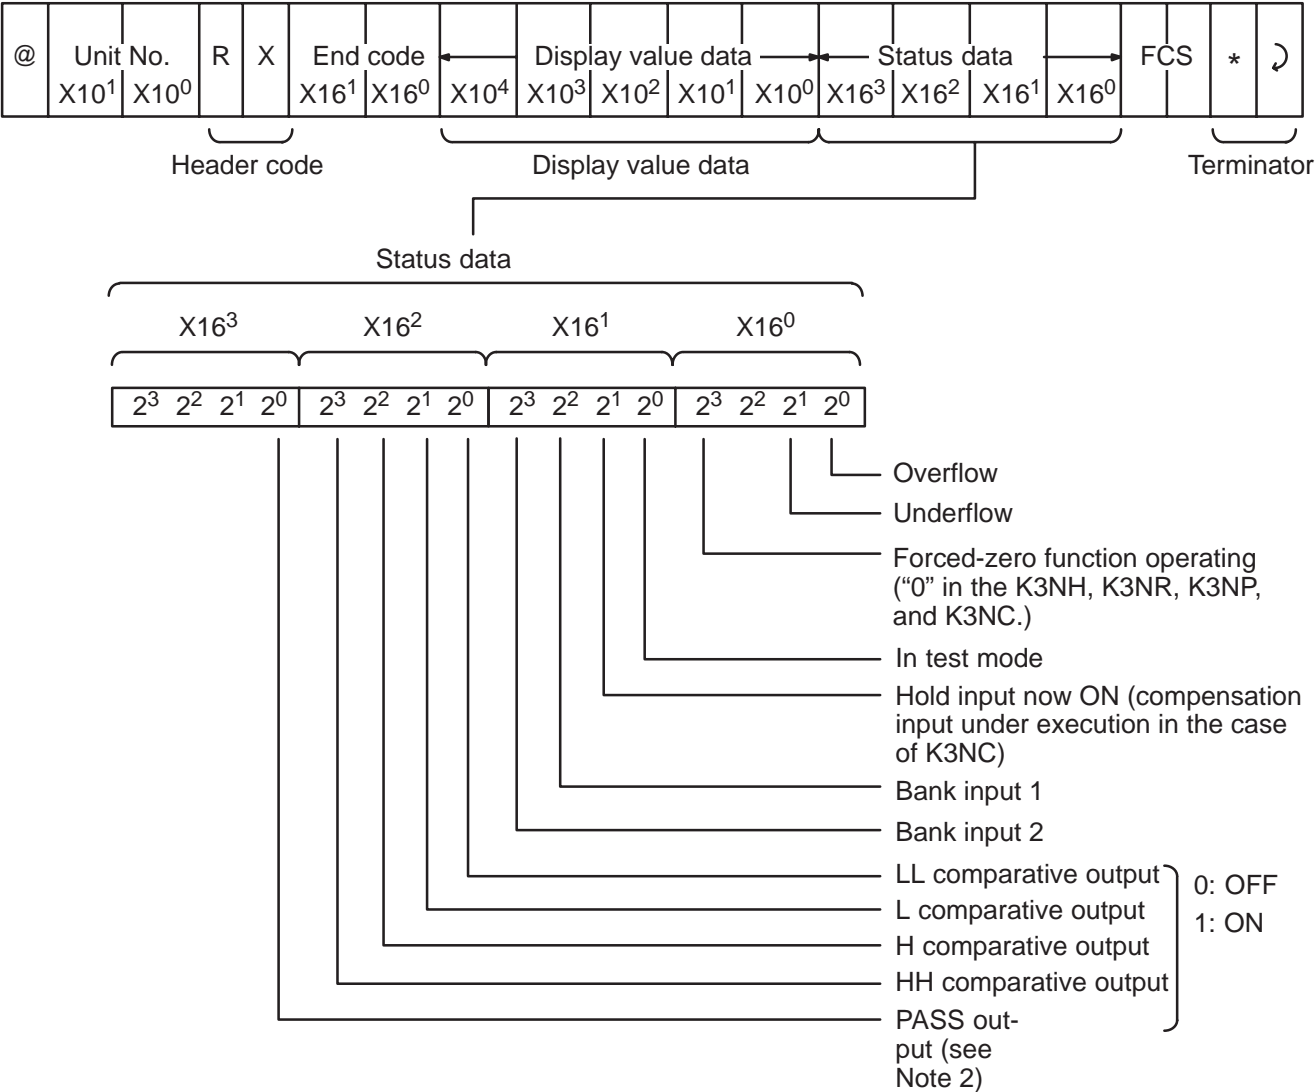

## Note

1. Display value is expressed in five figures of ASCII. Negative sign is represented by "F" at the position of the X10<sup>4</sup> digit.

2. The comparative outputs of K3NC status data are as follows:

