



# Initialization

Follow the steps described below to reset the set values of the K3NV to factory-set values.


- 1, 2, 3...
- Press the Mode and Shift Keys simultaneously while turning the K3NV on. The mant maintenance mode setting will be displayed.

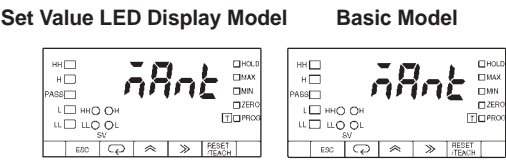

Press the Mode Key for more than one second. The re-in initialization setting will be displayed.

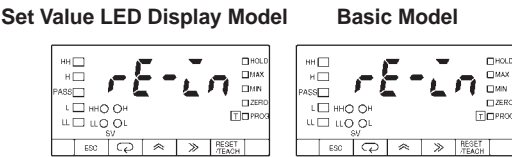

Press the Up Key to display no.

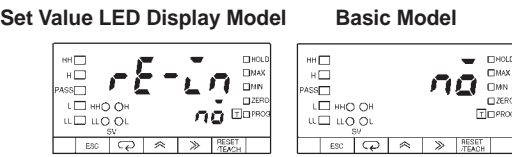

Press the Up Key to display yes. Press the Mode Key to initialize all set values. The K3NV will go into RUN mode.

