

5-3 External Input Signals

5-3-1 Bank Selection


- The K3NR uses BANK1 and BANK2 signals to select the setting value, prescaling value, and decimal point position of the bank 1, 2, 3, or 4.

Refer to the following for the relationship between BANK input signals and bank numbers.

Bank no.	Control input		Comparative set value	Prescaling value
	BANK 1	BANK 2		
1	OFF	OFF	sU1.**	ps1.**
2	ON	OFF	sU2.**	ps2.**
3	OFF	ON	sU3.**	ps3.**
4	ON	ON	sU4.**	ps4.**

Note If the prescaling bank is set to OFF, the pscl prescaling value for each bank will be fixed.

- When a bank is selected, the corresponding BANK indicator 1, 2, 3, or 4 will be lit.
- It takes up to 100 ms for a bank switching after BANK1 and BANK2 signals are input.

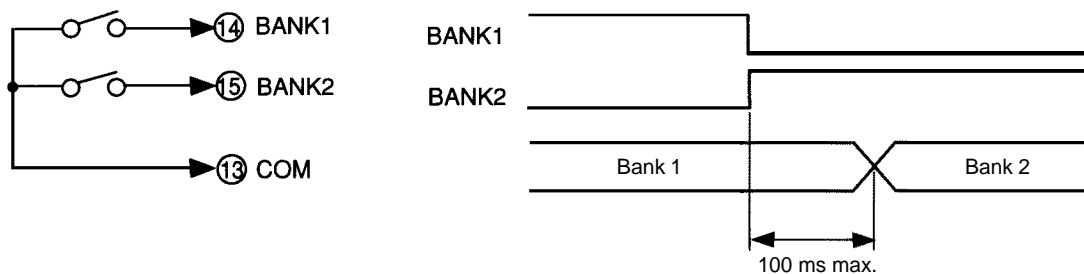

The bank number can be displayed on the PV or SV display by pressing the Shift Key for more than one second while the K3NR is in measurement operation. If there is no key input for three seconds, the K3NR will be in measurement operation again.