


### 5-3-3 RESET (Operating Mode F7)

- If a RESET signal is ON, the counting value will be reset to zero forcibly.
- It takes up to 16 ms for the counting value to be reset to zero after a RESET signal is input.

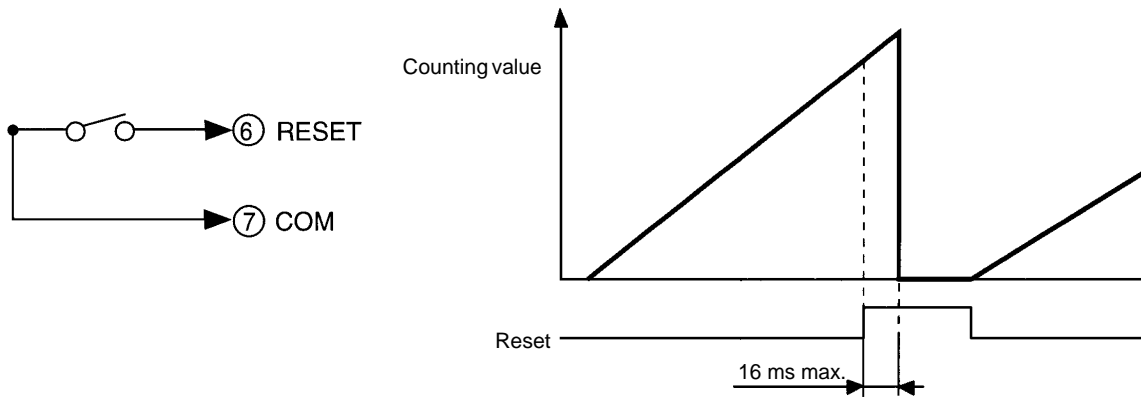

It is possible to reset the counting value by pressing the RESET/TEACH Key.