


5-1 Displaying and Changing Setting Values

5-1-1 Displaying Setting Values

Basic Model

- When the Mode Key is pressed in RUN mode, the K3NR displays a setting value on the PV display (in the order of HH, H, L, and LL).
- While the setting value is displayed, the corresponding SV display status indicator is lit.
- Unless another operation key is pressed within five seconds after the setting value is displayed, the process, maximum, or minimum value is displayed again.

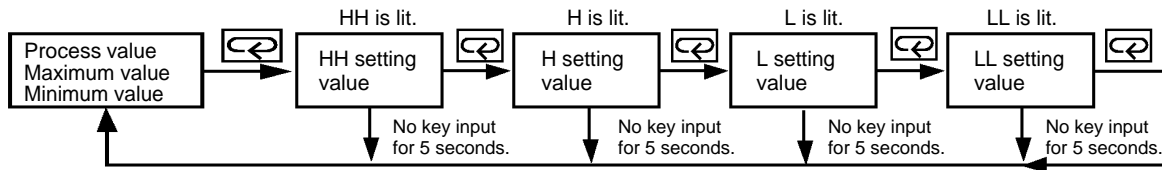

Set Value LED Display Model

- The setting value appears on the SV display and the corresponding SV display status indicator is lit while the process, maximum, or minimum value is displayed on the PV display
- When the Mode Key is pressed, the K3NR displays a setting value (in the order of HH, H, L, and LL) on the SV display.