


Maximum/Minimum Read


Reads maximum/minimum hold data (maximum/minimum values).
This command is not effective in the K3NC.

Command Format

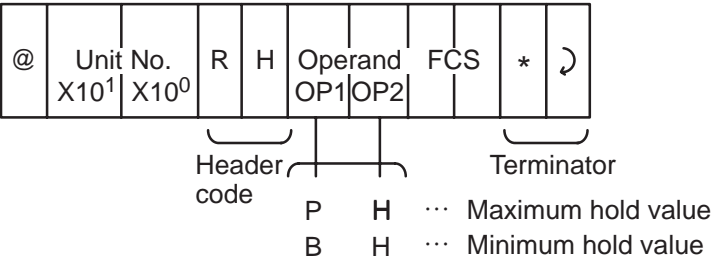

Response Format

Response at normal end. End code: "00"

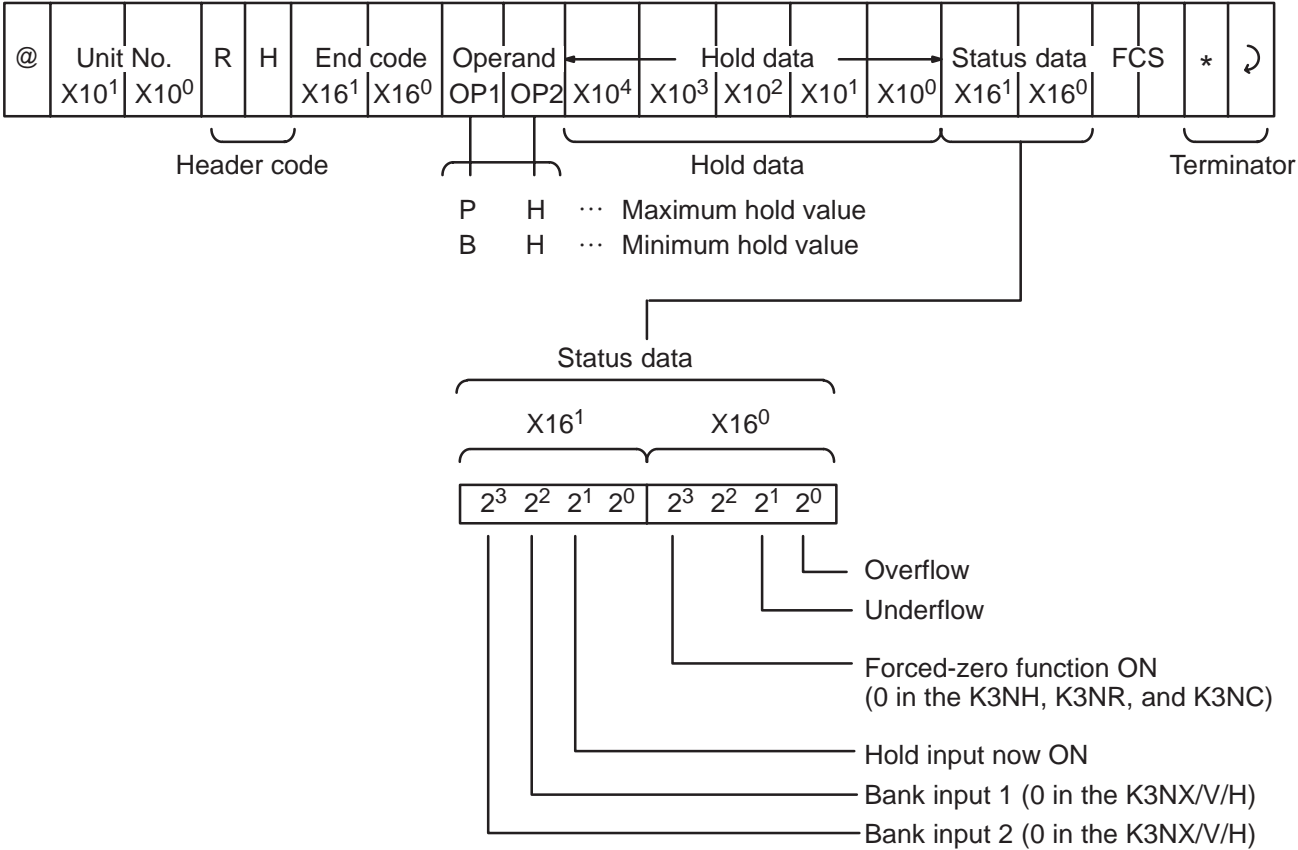

Hold data is expressed in five figures of ASCII. Negative value is indicated by "F" at the position of the X10⁴ digit.