
Simple and Easy

- Easy operation.
- LED display for incident level.
- Long sensing distance (200 mm with reflective models) double that of standard E3X-NA models.
- High resolution 7 times that of previous models (e.g., E3X-NA11).
- "Easy wiring" connector.
- Same design as E3X-DA-N Digital Fiber Amplifier.

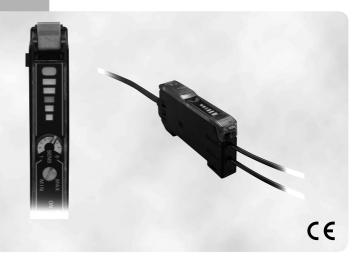

Ordering Information: Amplifier Units, Connectors and Accessories

Amplifier Units

Amplifier Units with Cables

Item	Annoaranaa	Control output	Model		
nem	Appearance		NPN output	PNP output	
Standard models		ON/OFF output	E3X-NA11	E3X-NA41	
High-speed detection models			E3X-NA11F	E3X-NA41F	
Mark-detecting models			E3X-NAG11	E3X-NAG41	
Water-resistant models			E3X-NA11V	E3X-NA41V	

Amplifier Units with Connectors

Item	Appearance	Applicable Connector		Control output	Model	
nem	Appearance	(order se	eparately)	Control output	NPN output	PNP output
Standard models		Master	E3X-CN11	ON/OFF output	E3X-NA6	E3X-NA8
		Slave	E3X-CN12			
Water-resistant models (M8 connectors)		XS3F-M421-40□-A XS3F-M422-40□-A			E3X-NA14V	E3X-NA44V

■ Amplifier Unit Connectors (Order Separately)

Note Stickers for Connectors are included as accessories.

Item	Appearance	Cable length	No. of conductors	Model
Master Connector	1	2 m	3	E3X-CN11
Slave Connector			1	E3X-CN12

■ Combining Amplifier Units and Connectors

Refer to the following tables when placing an order. Basically, Amplifier Units and Connectors are sold separately.

Amplifier Units				
Туре	NPN	PNP		
Standard models	E3X-NA6	E3X-NA8		

Applicable Connectors (Order Separately)			
Master Connector	Slave Connector		
E3X-CN11 (3-wire)	E3X-CN12 (1-wire)		

When Using 5 Amplifier Units
Amplifier Units (5 Units)

1 Master Connector + 4 Slave Connectors

Sensor I/O Connectors (Order Separately)

Size	Cable specifications	Appearance	Cable type		Model
M8	Standard cable	Straight connector	2 m	Four-core cable	XS3F-M421-402-A
			5 m		XS3F-M421-405-A
		L-shaped connector	2 m		XS3F-M422-402-A
			5 m		XS3F-M422-405-A

+

+

■ Accessories (Order Separately)

Mounting Brackets

Appearance	Applicable models	Model	Quantity
	E3X-NA□ E3X-NA□F E3X-NAG□	E39-L143	1
Contraction of the second seco	E3X-NA⊡V	E39-L148	

End Plate

Appearance	Model	Quantity
Contraction of the second s	PFP-M	1

Specifications: Amplifier Units

■ Ratings/Characteristics

			Amplifier Units	with Cables		Amplifier Ur	nits with Connectors
lt	em	Standard models	High-speed detection models	Mark-detecting models	Water-resistant models	Standard models	Water-resistant models (M8 connectors)
	NPN output	E3X-NA11	E3X-NA11F	E3X-NAG11	E3X-NA11V	E3X-NA6	E3X-NA14V
Output type	PNP output	E3X-NA41	E3X-NA41F	E3X-NAG41	E3X-NA41V	E3X-NA8	E3X-NA44V
Light source (wa	avelength)	Red LED (680 nm)		Green LED (520 nm)	Red LED (680 nm))	
Supply voltage		12 to 24 VDC ±10%, ripple	e (p-p): 10% max.				
Current consum	Current consumption 35 mA max. 35 mA max. (for 24-VDC power supply) 35 mA max.						
Control output		NPN/PNP (depends on mo selector	odel) open collect	or; load current: 50	mA max.; residual v	oltage: 1 V max.;	Light ON/Dark ON mode
Response time200 µs max. for operation and reset respectively (See note.)Operation: 20 µs max. Reset: 30 µs max.200 µs max. for operation and reset respectively (See note.)				ote.)			
Sensitivity adjust	stment	8-turn sensitivity adjuster ((with indicator)				
Circuit protectio	on	Reverse polarity, output short-circuit, mutual interference prevention (optic ference prevention (opti- cally synchronized)				e prevention (optically	
Timer function		OFF-delay timer: 40 ms (fi	ixed)				
Ambient illumin (receiver side)	ation	Incandescent lamp:10,000 Sunlight: 20,000) lux max.) lux max.				
Ambient temper	ature	Groups of 12 to	11 Amplifiers: -25	5°C to 50°C 25°C to 45°C (with n	o icing or condensa	tion)	
Ambient humidi	ty	Operating and storage: 35	% to 85% (with n	o condensation)			
Insulation resist	tance	20 MΩ min. (at 500 VDC)					
Dielectric streng	gth (destruction)						500 VAC at 50/60 Hz for 1 minute
Vibration resista (destruction)	ance	10 to 55 Hz with a 1.5-mm double amplitude for 2 hrs each in X, Y and Z directions					
Shock resistance	e (destruction)	500 m/s ² , for 3 times each in X, Y and Z directions					
Enclosure rating	9	IEC60529 IP50 (with Prote	ective Cover attac	hed)	IEC60529 IP66 (with Protective Cover attached)	IEC60529 IP50 (with Protective Cover attached)	IEC60529 IP66 (with Protective Cover at- tached)
Connection met	hod	Pre-wired (standard cable	length: 2 m)		•	Connector	M8 connector
Weight (packed	state)	Approx. 100 g			Approx. 110 g	Approx. 55 g	Approx. 65 g
Material	Case	Polybutylene terephthalate	e (PBT)		•	•	
	Cover	Polycarbonate			Polyethersulfone (PES)	Polycarbonate	Polyethersulfone (PES)
Accessories		Instruction Sheet					
Accessories		Instruction Sheet			(. 20)		I

Note ~ When there are 8 or more Units mounted side-by-side, the response time will be 350 μs max.

■ Amplifier Unit Connectors

Item		E3X-CN11 E3X-CN12				
Rated current		2.5 A				
Rated voltage		50 V				
Contact resista	nce	20 mΩ max. (20 mVDC max., 100 mA max.) (The above figure is for connection to the Amplifier Unit and the adjacent Connector. It does not include the co ductor resistance of the cable.)				
Number of inse (destruction)	ertions	50 times (for connection to the Amplifier Unit and the adjacent Connector)				
Material	Housing	Polybutylene terephthalate (PBT)				
	Contact	Phosphor bronze/gold-plated nickel				
Weight (packed	l state)	Approx. 55 g Approx. 25 g				

Ordering Information: Fiber Units

■ Through-beam Fiber Units

Refer to the end of the following table for notes and precautions.

(Free-cut) Indicates models that allow free cutting. Models without this mark do not allow free cutting.

: Red light : Green light

Applica- tion	Features	Appearance	Applicable Amplifier Unit	Sensing distance (mm) (Values in parentheses: when using the E39-F1 Lens Unit)	Standard object (see notes) (min. sensing object: opaque)	Model	Permissi- ble bend- ing radius
Long distance	M4 Free-cut	→	E3X-NA (V)	700 (2,000)	1.4-mm dia. (0.03-mm dia.)	E32-T11L	25 mm
		M4 screw	E3X-NADF	130 (370) 210 (600)	1.4-mm dia. (0.5-mm dia.)		
	3-mm dia.) _+	E3X-NAC (V)	700	1.4-mm dia. (0.03-mm dia.)	E32-T12L	
		 → 3-mm dia.	E3X-NAG E3X-NA	130 210	1.4-mm dia.		
	M3 Free-cut		E3X-NA (V)	200	(0.5-mm dia.) 0.9-mm dia. (0.03-mm dia.)	E32-T21L	10 mm
			E3X-NAG	1 40 6 0	0.9-mm dia.		
	2-mm dia.; small diameter))	E3X-NA (V)	200	(0.2-mm dia.) 0.9-mm dia. (0.03-mm dia.)	E32-T22L	
		i → 2-mm dia.	E3X-NAG	□ 40	0.9-mm dia.		
	M14; with lens; ideal for explo-		E3X-NA	6 0 1 4,000	(0.2-mm dia.) 10-mm dia. (0.1-mm dia.)	E32-T17L	25 mm
	sion-proof appli- cations	M14 screw	E3X-NA□F	4,200	10-mm dia. (1.5-mm dia.)		
General- purpose	M4 Free-cut		E3X-NA (V)	400 (3,000)	1.0-mm dia. (0.03-mm dia.)	E32-TC200	25 mm
		M4 screw	E3X-NA□F	120 (900)	1.0-mm dia. (0.2-mm dia.)		
	M4 Free-cut		E3X-NA (V)	280 (2,100)	1.0-mm dia. (0.03-mm dia.)	E32-T11R	1 mm
		M4 screw	E3X-NADF	■ 50 (375) ■ 80 (600)	1.0-mm dia. (0.2-mm dia.)		
	3-mm dia.	·	E3X-NA (V)	280	1.0-mm dia. (0.03-mm dia.)	E32-T12R	
		3-mm dia.	E3X-NAG E3X-NA	80	1.0-mm dia.		
	M3; possible to mount the reflec-		E3X-NA (V)	360	(0.2-mm dia.) 1.0-mm dia. (0.03-mm dia.)	E32-TC200A	25 mm
	tive side-view conversion attachment E39-F5	 M3 screw	E3X-NAG E3X-NA	☐ 65 ■ 100	1.0-mm dia.		
	M3; for detecting minute sensing)	E3X-NA (V)	100	(0.2-mm dia.) 0.5-mm dia. (0.03-mm dia.)	E32-TC200E	10 mm
	objects	∰ M3 screw	E3X-NAG E3X-NA] 20	0.5-mm dia.		
	M3; small diame-		E3X-NA	3 0 6 0	0.5-mm dia.) 0.5-mm dia. (0.03-mm dia.)	E32-T21R	1 mm
			E3X-NAG	12			
			E3X-NA□F	18	1.0-mm dia. (0.1-mm dia.)		

Super Manual Fiber Amplifier E3X-NA

Applica- tion	Features		Appearance	Applicable Amplifier Unit	Sensing distance (mm) (Values in parentheses: when using the E39-F1 Lens Unit)	Standard object (see notes) (min. sensing object: opaque)	Model	Permissi- ble bend- ing radius
Thin fiber	2-mm dia.; for detecting minute sensing objects	Free-cut)		E3X-NA (V)	1 00	0.5-mm dia. (0.03-mm dia.)	E32-T22	10 mm
			2-mm dia.	E3X-NA	∎30	0.5-mm dia. (0.1-mm dia.)		
	2-mm dia.; small diameter	(Free-cut)	↓ →	E3X-NA (V)	6 0	0.5-mm dia. (0.03-mm dia.)	E32-T22R	1 mm
			2-mm dia.	E3X-NA□F	18	0.5-mm dia. (0.1-mm dia.)		
	1.2-mm dia.; with sleeve	Free-cut	90 mm (40 mm)	E3X-NA□ (V)	400	1.0-mm dia. (0.03-mm dia.)	E32-TC200B E32-TC200B4	25 mm
			M4 screw 1.2-mm dia.	E3X-NAG	75			
			(): E32-TC200B4	E3X-NA□F	120	1.0-mm dia. (0.2-mm dia.)		
	0.9-mm dia.; with sleeve	(Free-cut)	90 mm (40 mm)	E3X-NA (V)	100	0.5-mm dia. (0.03-mm dia.)	E32-TC200F E32-TC200F4	10 mm
		→→→→→→→→ → ■ E3X-NAG□] 20] 20					
			(): E32-TC200F4	E3X-NA□F	30	0.5-mm dia. (0.1-mm dia.)		
Flexible (resists	Ideal for mount- ing on moving	Free-cut		E3X-NA (V)	360	1.0-mm dia. (0.03-mm dia.)	E32-T11	4 mm
break- ing) (R4)	sections (R4)			E3X-NAG	☐ 65 ¦ ¦ ¦			
				E3X-NA□F	100	1.0-mm dia. (0.2-mm dia.)		
				E3X-NA (V)	100	0.5-mm dia. (0.03-mm dia.)	E32-T21	
			— —⊕ → ⊕— — M3 screw	E3X-NAG] 18			
				E3X-NA□F	30	0.5-mm dia. (0.1-mm dia.)		
				E3X-NA (V)	100	0.5-mm dia. (0.03-mm dia.)	E32-T22B	
			_ → 1.5-mm dia.	E3X-NAG] 18			
				E3X-NA□F	30	0.5-mm dia. (0.1-mm dia.)		
Side- view	Long distance; space-saving	(Free-cut)	o	E3X-NA (V)	240	1.0-mm dia. (0.03-mm dia.)	E32-T14L	25 mm
		-	3-mm dia. + +	E3X-NAG	45]		
			1 1	E3X-NA□F	70	1.0-mm dia. (0.2-mm dia.)		
	Space-saving	Free-cut	3-mm dia. → +	E3X-NA (V)	110	1.0-mm dia. (0.03-mm dia.)	E32-T14LR	1 mm
			11	E3X-NA□F	∎ 33	1.0-mm dia. (0.2-mm dia.)		
	Suitable for de- tecting minute	Free-cut	A man alla R→R	E3X-NA (V)	90	0.5-mm dia. (0.03-mm dia.)	E32-T24	10 mm
	sensing objects		1-mm dia	E3X-NAG] 12			
				E3X-NA□F	27	0.5-mm dia. (0.3-mm dia.)		
	Suitable for de- tecting minute	Free-cut)	1-mm dia. → 🕂 🕂	E3X-NA (V)	30	0.5-mm dia. (0.03-mm dia.)	E32-T24R	1 mm
	sensing objects (small diameter)		ĬĬ	E3X-NA□F	9	0.5-mm dia. (0.3-mm dia.)		
	Screw-mounting type	Free-cut)	Л→П	E3X-NA (V)	1,800	4.0-mm dia. (0.03-mm dia.)	E32-T14	25 mm
				E3X-NAG	330			
				E3X-NA□F	540	4.0-mm dia. (0.2-mm dia.)		

$E3X\text{-}NA \ \text{Super Manual Fiber Amplifier}$

Applica- tion	Features	Appearance	Applicable Amplifier Unit	Sensing distance (mm) (Values in parentheses: when using the E39-F1 Lens Unit)	Standard object (see notes) (min. sensing object: opaque)	Model	Permissi- ble bend- ing radius
Chemi- cal-re- sistant	Fluororesin-cov- ered; withstands chemicals and harsh environments (oper-		E3X-NA (V)	1,600	4.0-mm dia. (0.2-mm dia.)	E32-T12F	40 mm
	ating ambient temperature: –30°C to 70°C)	5-mm dia.	E3X-NA	480	4.0-mm dia. (0.7-mm dia.)		
	Fluororesin-cov- ered; side-view;	N→N	E3X-NA (V)	200	3.0-mm dia. (0.2-mm dia.)	E32-T14F	
	chemicals and harsh envi- ronments (operating ambi- ent temperature: -30°C to 70°C)	5-mm dia.+U+ U	E3X-NAG	37	3.0-mm dia.		
	Fluororesin: withstands		E3X-NA (V)	60	(0.7-mm dia.) 1.0-mm dia.	E32-T81F	10 mm
	chemicals and harsh envi- ronments (operating ambi- ent temperature:	 6-mm dia.	E3X-NADF	350	(0.2-mm dia.) 1.0-mm dia. (0.5-mm dia.)		
Heat-re- sistant	-40°C to 200°C) Resists 200°C; flexible (R10); fiber sheath materi-	===\$>→=\$==	E3X-NA (V)	180	1.0-mm dia. (0.2-mm dia.)	E32-T81R	10 mm
	al: fluororesin (operating ambient temperature: – 40°C to 200°C)	M4 screw	E3X-NA□F	50	1.0-mm dia. (0.5-mm dia.)		
	Resists 150°C *1; fiber sheath ma- terial: fluororesin	—⊕→⊕—	E3X-NA (V)	400	1.5-mm dia. (0.03-mm dia.)	E32-T51	35 mm
	(operating ambient temper- ature: -40°C to 150°C)	M4 screw	E3X-NA□F	120	1.5-mm dia. (1.0-mm dia.)		
	Resists 300°C *2, with spi- ral tube; high mechanical strength; fiber sheath ma-	┉┉╴ॏॎॖॎञ⊸ः दऻॏॖऀ॒॒॑ॾ┉	E3X-NA (V)	300 (3,000)	1.0-mm dia. (0.03-mm dia.)	E32-T61	25 mm
	terial: stainless steel (oper- ating ambient temperature: -40°C to 300°C)	M4 screw	E3X-NA□F	90	1.0-mm dia. (0.5-mm dia.)		
	Side-view; re- sists 150°C *1; suitable for de- tecting minute sensing ob-	2-mm dia. → +	E3X-NA□ (V)	130	1.0-mm dia. (0.03-mm dia.)	E32-T54	35 mm
	jects; fiber sheath material: fluororesin (operating am- bient temperature: -40°C to 150°C)	ΪΪ	E3X-NA□F	35	1.0-mm dia. (0.3-mm dia.)		
	Resists 200°C *2; L-shaped; fiber sheath ma- terial: stainless steel	3-mm dia.	E3X-NA (V)	700	1.7-mm dia. (0.03-mm dia.)	E32-T84S	25 mm
			E3X-NA□F	210	1.7-mm dia. (0.4-mm dia.)		
Slot sen- sor	Suitable for film sheet detection; no optical axis		E3X-NA (V)	1 10	4.0-mm dia. (0.1-mm dia.)	E32-G14	25 mm
	adjustment required; easy to mount		E3X-NAG	1 10			
			E3X-NA□F	1 10	4.0-mm dia. (1.0-mm dia.)		
Narrow vision field	Suitable for de- tecting wafers	3-mm dia.	E3X-NA□ (V)	300	1.7-mm dia. (0.5-mm dia.)	E32-T22S	10 mm
	Side-view: suit-	m → m	E3X-NA (V)		2.0-mm dia.		4
	able for detecting wafers	3.5 mm dia. x 3 🛨 🗲	E3X-NA	210	2.0-mm dia. (0.03-mm dia.) 2.0-mm dia.	E32-T24S	

Super Manual Fiber Amplifier E3X-NA

Applica- tion	Features	Appearance	Applicable Amplifier Unit	Sensing distance (mm) (Values in parentheses: when using the E39-F1 Lens Unit)	Standard object (see notes) (min. sensing object: opaque)	Model	Permissi- ble bend- ing radius
Area sensing	Multi-point detection (4-head)		E3X-NA□ (V)	300	2.0-mm dia. (0.03-mm dia.)	E32-M21	25 mm
		M3 screw	E3X-NA□F	90	2.0-mm dia. (0.3-mm dia.)		
	Detects in a 30-mm area	• *	E3X-NA□ (V)	920	(0.5-mm dia.) *3	E32-T16W	10 mm
		30 mm	E3X-NAG	170			
			E3X-NA⊡F	270	(4.0-mm dia.) *3		
	Detects in a 30-mm area	• •	E3X-NA□ (V)	690	(0.5-mm dia.) *3	E32-T16WR	1 mm
		ie ^{30 mm} ie	E3X-NA□F	200	(4.0-mm dia.) *3		
	Side-view; suit- able for applica- tions with limited spatial depth	11 mm	E3X-NA (V)	520	(0.3-mm dia.) *3 E32-T1	E32-T16J	10 mm
			E3X-NAG	95		_	
			E3X-NA□F	150	(2.0-mm dia.) *3		
	Side-view; suit- able for applica- tions with limited spatial depth	11 mm	E3X-NA□ (V)	390	(0.3-mm dia.) *3	E32-T16JR	1 mm
			E3X-NA□F	110	(2.0-mm dia.) *3		
	Suitable for de- tecting over a 10-mm area; long		E3X-NA□ (V)	1,500	(0.9-mm dia.) *3 E32	E32-T16	25 mm
	distance	10 mm	E3X-NAG	275			
			E3X-NA□F	450	(1.5-mm dia.) *3		
	Stable for detect- ing minute sens- ing objects in a		E3X-NA□ (V)	600	(0.3-mm dia.) *3	E32-T16P	10 mm
wide area; deg	wide area; degree of pro- tection: IEC 60529 IP50	● 11 mm	E3X-NAG	110		(2.0-mm dia.) *3	
		///	E3X-NA□F	180	(2.0-mm dia.) *3		
	Stable for detect- ing minute sens-		E3X-NA (V)	450	(0.3-mm dia.) *3	E32-T16PR	1 mm
	ing objects in a wide area; degree of pro- tection: IEC60529 IP50	11 mm	E3X-NA□F	130	(2.0-mm dia.) *3		

 *1 For continuous operation, use the products within a temperature range of -40° C to 130° C.

*² Indicates the heat-resistant temperature at the fiber tip.

*³ These figures are for a sensing distance of 100 mm. (Diameters of sensing objects are ones at a stationary state.)

Note: 1. The size of standard sensing object is the same as the fiber core diameter (lens diameter for models with lens).

- 2. The values of the minimum sensing object for E3X-NA (V) and E3X-NAG through-beam models indicate those obtained where the sensing distance and sensitivity are set to optimum values.
- 3. The value of the minimum sensing object for E3X-NA□F through-beam models indicates that obtained at the rated sensing distance with the sensitivity set to the optimum value.

■ Fiber Units with Reflective Sensors

Refer to the end of the following table for notes and precautions.

(Free-cut) Indicates models that allow free cutting. Models without this mark do not allow free cutting.

: Red light : Green light

Applica- tion	Features	;	Appearance	Applicable Amplifier Unit	Sensing distance (mm) *1	Standard object (see note) (min. sensing object: Gold wire)	Model	Permis- sible bending radius
Long distance	M6	(Free-cut)		E3X-NA (V) 200	250×250 (0.01-mm dia.)	E32-D11L	25 mm	
			M6 screw	E3X-NAG	□ 35	50×50 (0.1-mm dia.)		
				E3X-NA□F	65	100×100 (0.015-mm dia.)		
	3-mm dia.; small diameter	(Free-cut)		E3X-NA (V)	120	150×150 (0.01-mm dia.)	E32-D12	
			3-mm dia.	E3X-NAG] 20	25×25 (0.1-mm dia.)		
				E3X-NA□F	4 0	50×50 (0.015-mm dia.)		
	M4	(Free-cut)		E3X-NA□ (V)	■ 50	100×100 (0.01-mm dia.)	E32-D21L	10 mm
			M4 screw	E3X-NAG] 10	25×25 (0.1-mm dia.)		
				E3X-NA□F	17	25×25 (0.015-mm dia.)		
	3-mm dia.; small diameter	(Free-cut)		E3X-NA□ (V)	■ 50	100×100 (0.01-mm dia.)	E32-D22L	
			3-mm dia.	E3X-NAG] 10	25×25 (0.1-mm dia.)		
				E3X-NA□F	17	25×25 (0.015-mm dia.)		
General- purpose	M6	(Free-cut)		E3X-NA (V)	150	200×200 (0.01-mm dia.)	E32-DC200	25 mm
			M6 screw	E3X-NAG] 25	50×50 (0.1-mm dia.)		
				E3X-NA□F	■ 50	75×75 (0.015-mm dia.)		
	M6	(Free-cut)		E3X-NA (V)	90	150×150 (0.01-mm dia.)	E32-D11R	1 mm
			M6 screw	E3X-NAG	15	25×25 (0.1-mm dia.)		
				E3X-NA□F	∎ 30	50×50 (0.02-mm dia.)		
	3-mm dia.	Free-cut)		E3X-NA (V)	90	150×150 (0.01-mm dia.)	E32-D12R	
			t 3-mm dia.	E3X-NAG	15	25×25 (0.1-mm dia.)		
				E3X-NA□F	∎30	50×50 (0.02-mm dia.)		
	M3; small diam- eter	(Free-cut)		E3X-NA (V)	■ 36	50×50 (0.01-mm dia.)	E32-DC200E	10 mm
			M3 screw	E3X-NAG	6	25×25 (0.1-mm dia.)		
				E3X-NA□F] 12	25×25 (0.02-mm dia.)		
	M3; small diam- eter	(Free-cut)	⊕	E3X-NA□ (V)	15	25×25 (0.01-mm dia.)	E32-D21R	1 mm
			M3 screw	E3X-NA□F	5	25×25 (0.03-mm dia.)		
	3-mm dia.; small diameter	(Free-cut)	ł	E3X-NA (V)	15	25×25 (0.01-mm dia.)	E32-D22R	
			3-mm dia.	E3X-NA□F	5	25×25 (0.03-mm dia.)		

Super Manual Fiber Amplifier E3X-NA

Applica- tion	Features	Appearance	Applicable Amplifier Unit	Sensing distance (mm) *1	Standard object (see note) (min. sensing object: Gold wire)	Model	Permis- sible bending radius
Thin fi- ber	2.5-mm dia.; Free-cut	90 mm (40 mm)	E3X-NA (V)	150	200×200 (0.01-mm dia.)	E32-DC200B E32-DC200B4	25 mm
		M6 screw 2.5-mm dia.	E3X-NAG	25	50×50 (0.1-mm dia.)		
		(): E32-DC200B4	E3X-NA□F	50	75×75 (0.015-mm dia.)		
	1.2-mm dia.; with sleeve	90 mm (40 mm)	E3X-NA□ (V)	∎ 36	50×50 (0.01-mm dia.)	E32-DC200F E32-DC200F4	10 mm
		M3 screw 1.2-mm dia.	E3X-NAG	6	25×25 (0.1-mm dia.)		
		(): E32-DC200F4	E3X-NA□F] 12	25×25 (0.02-mm dia.)		
	0.8-mm dia.; for detecting minute sensing	3-mm dia.	E3X-NA□ (V)] 10	25×25 (0.01-mm dia.)	E32-D33	4 mm
	objects	0.8-mm dia.	E3X-NA□F	3.3	25×25 (0.03-mm dia.)		
	0.5-mm dia.; for detecting minute sensing objects	0.5-mm dia.	E3X-NA	1.5	25×25 (0.01-mm dia.)	E32-D331	4 mm
		2-mm dia.	E3X-NA□F	10.5	25×25 (0.05-mm dia.)		
Flexible (resists break-	Ideal for mounting on moving sections (R4)		E3X-NA (V)	90	150×150 (0.01-mm dia.)	E32-D11	4 mm
ing) (R4)	Free-cut	M6 screw	E3X-NAG] 15	25×25 (0.1-mm dia.)		
			E3X-NA□F	∎ 30	50×50 (0.015-mm dia.)		
		_ _	E3X-NA□ (V)	15	25×25 (0.01-mm dia.)	E32-D21	
	(Free-cut)	M3 screw	E3X-NA□F	15	25×25 (0.02-mm dia.)		
			E3X-NA (V)	15	25×25 (0.01-mm dia.)	E32-D21B	
	(Free-cut)	M4 screw	E3X-NAG	2.4	25×25 (0.1-mm dia.)]	
			E3X-NA□F	15	25×25 (0.02-mm dia.)		
			E3X-NA (V)	7	25×25 (0.01-mm dia.)	E32-D22B	
		1.5-mm dia.	E3X-NA□F	12.3	25×25 (0.02-mm dia.)		

Applica- tion	Features	Appearance	Applicable Amplifier Unit	Sensing distance (mm) *1	Standard object (see note) (min. sensing object: Gold wire)	Model	Permis- sible bending radius
Coaxial	M6 coaxial; high-precision positioning	•	E3X-NA□ (V)	150	200×200 (0.01-mm dia.)	E32-CC200	25 mm
	,	──── ─ ─ ─ M6 screw	E3X-NAG	25	50×50 (0.1-mm dia.)		
			E3X-NA□F	5 0	75×75 (0.015-mm dia.)		
	3-mm dia. coaxi- al; small diame-		E3X-NA□ (V)	80	100×100 (0.01-mm dia.)	E32-D32L	
	ter; high- precision positioning	 3-mm dia.	E3X-NAG] 12	25×25 (0.1-mm dia.)		
			E3X-NA□F	25	50×50 (0.02-mm dia.)		
	M3 coaxial; high-precision		E3X-NA□ (V)	40	50×50 (0.01-mm dia.)	E32-C31	
	positioning; possible to mount small- spot lens (E39-F3A-5/	M3 screw	E3X-NAG	16	25×25 (0.1-mm dia.)		
	F3B/F3C)		E3X-NA□F	13	25×25 (0.02-mm dia.)		
	M3 coaxial; high-preci- sion positioning; possi- ble to mount small–spot		E3X-NA (V)	15	25×25 (0.01-mm dia.)	E32-C41	
	lens (E39-F3A-5/F3B/F3C)	M3 screw	E3X-NA□F	15	25×25 (0.02-mm dia.)		
	2-mm dia. coaxial; high- precision positioning; possible to mount small-		E3X-NA (V)	15	25×25 (0.01-mm dia.)	E32-C42	
	spot (0.1 to 0.6 dia.) lens (E39-F3A)	2-mm dia.	E3X-NA□F	15	25×25 (0.02-mm dia.)	•	
	2-mm dia. coaxi- al; high-preci-		E3X-NA□ (V)	40	50×50 (0.01-mm dia.)	E32-D32	
	sion positioning; possible to mount small-spot (0.5 to 1	c∔ 2-mm dia.	E3X-NAG]6	25×25 (0.1-mm dia.)		
	dia.) lens (E39-F3A)		E3X-NA□F	13	25×25 (0.02-mm dia.)		
Side- view	6-mm dia.; long Free-cut		E3X-NA□ (V)	40	50×50 (0.03-mm dia.)	E32-D14L	25 mm
		6-mm dia. + 1 +	E3X-NAG] 10	25×25 (0.3-mm dia.)		
		m	E3X-NA□F	13	25×25 (0.03-mm dia.)		
	6-mm dia.	6-mm dia. + ∎ +	E3X-NA (V)	16	25×25 (0.03-mm dia.)	E32-D14LR	1 mm
		¥	E3X-NA□F	5			
	2-mm dia.; small diameter space-		E3X-NA (V)	15	25×25 (0.03-mm dia.)	E32-D24	10 mm
	saving	- 2-mm dia.	E3X-NAG	2.4	25×25 (0.3-mm dia.)		
		Т	E3X-NA□F	15	25×25 (0.03-mm dia.)		
	2-mm dia.; small diameter space-	[+-2-mm dia.	E3X-NA (V)	17	25×25 (0.03-mm dia.)	E32-D24R	1 mm
	saving	¥	E3X-NA□F	2.3			
Chemi- cal-re-	Fluororesin- covered; with-		E3X-NA (V)	5 0	100×100 (0.03-mm dia.)	E32-D12F	40 mm
sistant	stands chemi- cals and harsh environments (operating	6-mm dia.	E3X-NAG]8	25×25 (0.3-mm dia.)]	
	ambient temperature: -30°C to 70°C)		E3X-NA□F	116	25×25 (0.03-mm dia.)]	

Super Manual Fiber Amplifier E3X-NA

Applica- tion	Features	Appearance	Applicable Amplifier Unit	Sensing distance (mm) *1	Standard object (see note) (min. sensing object: Gold wire)	Model	Permis- sible bending radius
Heat-re- sistant	Resists 150°C *2; fiber sheath material: fluo- roresin (operating ambi-	M6 screw	E3X-NA□ (V)	120	150×150 (0.03-mm dia.) 50×50	E32-D51	35 mm
	ent temperature: -40°C to 150°C)			40	(0.03-mm dia.)		
	Resists 300°C *3; fiber sheath material: stainless steel (operating ambient	₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩	E3X-NA□ (V)	45	100×100 (0.03-mm dia.)	E32-D61	25 mm
	temperature: –40°C to 300°C)	No screw	E3X-NA□F	15	25×25 (0.03-mm dia.)		
	Resists 400°C *3; fiber sheath material: stainless steel (operating ambient temperature:	1.25-mm dia.	E3X-NA (V)	■ 30	50×50 (0.03-mm dia.)	E32-D73	
	-40°C to 400°C)	M4 screw	E3X-NA□F	10	25×25 (0.03-mm dia.)		
Area sensing	Side-view; de- tection over wide areas		E3X-NA (V)	75	100×100 (0.03-mm dia.)	E32-D36P1	25 mm
	wide aleas	I	E3X-NA□F	25	50×50 (0.03-mm dia.)		
Retrore- flective	Transparent object detection	M6 screw ——⊄⊈∰r ——	E3X-NA (V)	10 to 250	35-mm dia. (0.3-mm dia.)	E32-R21 +E39-R3	10 mm
		Reflector E39-R3	E3X-NA□F	10 to 250	35-mm dia. (0.5-mm dia.)	(Attachment)	
	Transparent ob- ject detection (operating ambi- ent temperature:		E3X-NA (V)	150 to 1,500	35-mm dia. (0.6-mm dia.)	E32-R16 +E39-R1 (Attachment)	25 mm
	-25°C to 55°C); degree of protection: IEC 60529 IP66	Reflector E39-R1	E3X-NA□F	150 to 1,000	35-mm dia. (4.0-mm dia.)		
Limited reflec- tive	Suitable for po- sitioning crystal		E3X-NA (V)	4 to12		E32-L56E1 E32-L56E2	35 mm
	°		E3X-NA□F	4 to12			
	Detects wafers and small differ- ences in height;	1 22	E3X-NA (V)	4±2	25×25 (0.015-mm dia.)	E32-L24L	10 mm
	(operating ambient tem- perature: -40°C to 105°C); degree		E3X-NA□F	4±2	25×25 (0.03-mm dia.)		
	of protection: IEC 60529 IP50	(ř)	E3X-NA□ (V)	7.2±1.8	25×25 (0.015-mm dia.)	E32-L25L	
			E3X-NA□F	7.2±1.8	25×25 (0.03-mm dia.)		
	Detects wafers and small differ- ences in height;		E3X-NA (V)	3.3	25×25 (0.015-mm dia.)	E32-L25	25 mm
	degree of protection: IEC 60529 IP50		E3X-NA□F	3.3	25×25 (0.03-mm dia.)		
			E3X-NA (V)	3.3	25×25 (0.015-mm dia.)	E32-L25A	
		Y	E3X-NA□F	3.3	25×25 (0.03-mm dia.)		
Fluid- level de-	Fluid contact type: un- bendable section		E3X-NA (V)			E32-D82F1 E32-D82F2	40 mm
tection	L=150 mm, 350 mm (two types)	+L+	E3X-NA□F				
	Tube-mounting (Free-cut)		E3X-NA (V)			E32-L25T	10 mm
			E3X-NA□F				

*1 Sensing distance indicates values for white paper.

 $^{\star 2}~$ For continuous operation, use the products within a temperature range of –40°C to 130°C.

 $^{\star 3}$ Indicates the heat-resistant temperature at the fiber tip.


Note The values of the minimum sensing object indicate those obtained at a distance where the smallest object can be sensed with the Reflective Fiber Unit.

Operation

Output Circuits

Output	Model	Mode selector	Timing chart	State of output transistor	Output circuit
NPN	E3X-NA11 E3X-NA6 E3X-NAG11 E3X-NA11F E3X-NA11V E3X-NA14V	LIGHT ON (L/ON)	Incident light No incident light Operation indicator ON (orange) OFF Output ON transistor OFF Load (relay) Operate Release (Between brown and black)	Light ON	Photo- electric Sensor main circuit Black Black Control output 3 Blue
		DARK ON (D/ON)	Incident light No incident light Operation indicator ON (orange) OFF Output transistor OFF Load (relay) Operate Release (Between brown and black)	Dark ON	M8 Connector Pin Arrangement
PNP	E3X-NA41 E3X-NA8 E3X-NA641 E3X-NA41F E3X-NA41V E3X-NA41V E3X-NA44V	LIGHT ON (L/ON)	Incident light No incident light Operation indicator ON (orange) OFF Output ON transistor OFF Load (relay) Operate Release (Between brown and black)	Light ON	Photo- (orange) Photo- electric sensor circuit Black Control output Black Control output Black Control output U D 24 VDC
		DARK ON (D/ON)	Incident light No incident light Operation indicator ON (orange) OFF Output ON transistor OFF Load (relay) Operate Release (Between brown and black	Dark ON	M8 Connector Pin Arrangement

Connectors (Sensor I/O Connectors)




Classification	Color of cable conductors	Connection pin number	Application
DC	Brown	1	Power supply (+V)
	White	2	
	Blue	3	Power supply (0 V)
	Black	4	Output

Note Pin 2 is not used.

Engineering Data (Typical)


Parallel Operating Range

At max. sensitivity. (Use for optical axis adjustment at installation.)

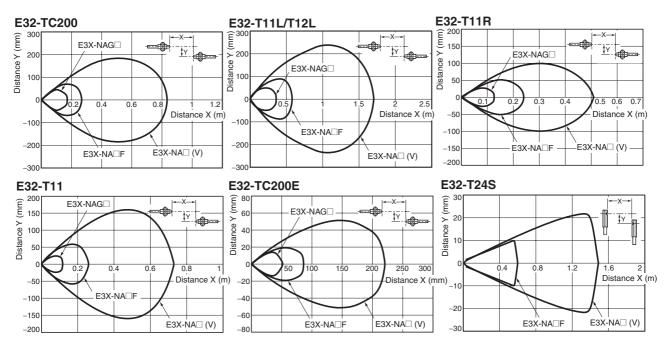



Operating Range

With standard sensing object at max. sensitivity. (Use for the positioning of the object and Sensor.)

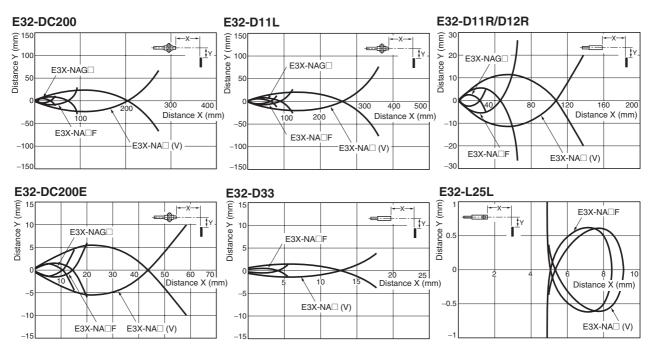


Number of Turns of Sensitivity Adjuster vs. Sensing Distance

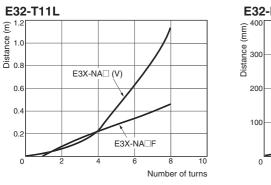

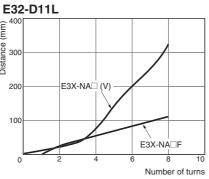

200

Sensing Distance vs. Hysteresis

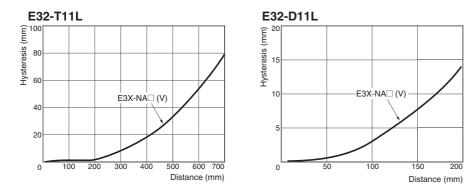

Application

■ Wiring Precautions

Read the following before using the Amplifier Unit and Sensor to ensure safety.

Power Supply Voltage

Do not impose any voltage exceeding the rated voltage on the E3X-NA. Do not impose AC power (100 VAC) on models that operate with DC. In both cases, the E3X-NA may rupture or burn.

Load Short-circuits


Do not short-circuit the load connected to the E3X-NA, otherwise the E3X-NA may rupture or burn.

Polarity

When supplying power to the E3X-NA, make sure that the polarity of the power is correct, otherwise the E3X-NA may rupture or burn.

Amplifier Units

Nomenclature

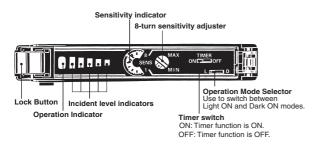

Installation

Turning Power ON

The Sensor is ready to operate within 100 ms after the power supply is turned ON. If the Sensor and load are connected to power supplies separately, be sure to turn ON the power supply to the Sensor first.

Turning Power OFF

Pulses may be output when the power is turned OFF. Always turn OFF the power to the load or the load line first.

Power Supply Type

A full or half-wave rectifying power supply without a smoothing circuit cannot be used.

Communications Hole

The hole on the side of the Amplifier Unit is a communications hole for preventing mutual interference when Amplifier Units are mounted side-by-side. The E3X-MC11 Mobile Console (sold separately) cannot be used.

If an excessive amount of light is received via the Sensor, the mutual interference prevention function may not work. In this case, make the appropriate adjustments using the sensitivity adjuster.

The mutual interference prevention function will not operate when the E3X-NA is used side-by-side with E3X-DA-N models.

No-load Operation

A load must be connected to the E3X-NA during operation, otherwise internal elements may rupture or burn. Always wire through a load.

Operating Environment

- Do not use the Amplifier Unit or Sensor in places with flammable or explosive gas.
- Do not use the Amplifier Unit or Sensor underwater.
- Do not disassemble, repair, or modify the Amplifier Unit or Sensor.

Wiring

Cable

The cable can be extended, provided that the extension wire applied is at least 0.3 mm^2 thick and the total distance no more than 100 m.

Do not pull the cable with a force exceeding 30N.

Separation from Power or High-tension Lines

Do not wire power lines or high-tension lines alongside the lines of the Amplifier Unit in the same conduit, otherwise the Amplifier Unit may be damaged or malfunction due to induction. Be sure to wire the lines of the Amplifier Unit separated as far as possible from power lines or high-tension lines or laid in an exclusive, shielded conduit.



Power Supply

If a standard switching regulator is used as a power supply, the frame ground (FG) terminal and the ground (G) terminal must be grounded, otherwise faulty operation may result from the switching noise of the power supply.

M8 Metal Connectors (Water-resistant Models)

Turn OFF the power before inserting or removing the connector.

Hold the connector cover when inserting or removing the connector.


Tighten the fixing screws by hand. Using tools such as pliers may cause damage.

The applicable tightening torque range is 0.3 to 0.4 N·m. If tightening is insufficient, the enclosure rating may not be maintained, and vibrations may cause the connector to come loose.


Mounting

Joining Amplifier Units

1. Mount the Amplifier Units one at a time onto the DIN track.



2. Slide the Amplifier Units together, line up the clips, and press the Amplifier Units together until they click into place.




Separating Amplifier Units

Slide Amplifier Units away from each other, and remove from the DIN track one at a time. (Do not attempt to remove Amplifier Units from the DIN track without separating them first.)

- Note: 1. The specifications for ambient temperature will vary according to the number of Amplifier Units used together. For details, refer to *Ratings/Characteristics*.
 - 2. Always turn OFF the power supply before joining or separating Amplifier Units.


Mounting

- 1. Mount the front part on the mounting bracket (ordered separately) or a DIN track.
- 2. Press the back part onto the mounting bracket or the DIN track.
- **Note** Do not mount the back of the Amplifier Unit onto the mounting bracket or the DIN track first, otherwise the mounting strength of the Amplifier Unit may be reduced. Always mount the front of the Amplifier Unit first.

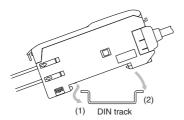


Dismounting

By pressing the Amplifier Unit in direction (3) and lifting the fiber insertion part in direction (4) as shown in the following diagram, the Amplifier Unit can be dismounted with ease.

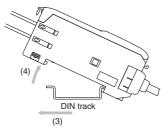

When side-mounting using a mounting bracket, secure the mounting bracket to the Amplifier Unit and then mount using M3 screws. Use plain washers of diameter 6 mm or less when mounting.



Adjustment

Indicators

In addition to an operation indicator (orange), the E3X-NA also has incident level indicators (4 green and 1 red). Use these indicators for optical axis adjustments and maintenance.

Status of indicators (in L/ON mode)	Operation indicator (in L/ON mode)	Incident level
Operation indicator Incident level indicators	Not lit	Approx. 80% max. of op- erating level
	Not lit	Approx. 80% to 90% of operat- ing level
	Not lit or lit	Approx. 90% to 110% of operat- ing level
	Lit	Approx. 110% to 120% of operat- ing level
	Lit	Approx. 120% min. of operating level

Note The rightmost indicator will be lit even if the incident level is 0.

Operating Environment

Ambient Conditions

If dust or dirt adhere to the hole for optical communications, it may prevent normal communications. Be sure to remove any dust or dirt before using the Units.

Miscellaneous

Ratings and Specifications

The ratings and performance specifications for items such as the minimum sensing object and characteristics are based on products taken at random from certain production lots. Use this data as reference only.

Protective Cover

Be sure to mount the Protective Cover before use.


Fiber Unit


Mounting

Tightening Force

The tightening force applied to the Fiber Unit should be as follows:

Screw-mounting Model





Cylindrical Model

Fiber Units	Clamping torque
M3/M4 screw	0.78 N·m max.
M6 screw/ 6-mm dia. cylinder	0.98 N·m max.
1.5-mm dia. cylinder	0.2 N·m max.
2-mm dia./3-mm dia. cylinder	0.29 N·m max.
E32-T12F 5-mm dia. fluororesin model	0.78 N·m max.
E32-D12F 6-mm dia. fluororesin model	0.78 N·m max.
E32-T16	0.49 N·m max.
E32-R21	0.39 N·m max.
E32-M21	Up to 5 mm to the tip: 0.49 N·m max. More than 5 mm from the tip: 0.78 N·m max.
E32-L25A	0.78 N·m max.
E32-T16P E32-T16PR E32-T24S E32-L24L E32-L25L E32-L25L E32-T16J E32-T16JR	0.29 N⋅m max.
E32-T16W E32-T16WR	0.3 N·m max.

Use a proper-sized wrench.




Fiber Connection and Disconnection

The E3X Amplifier Unit has a lock button. Connect or disconnect the fibers to or from the E3X Amplifier Unit using the following procedures:


1. Connection

Open the protective cover, insert the fibers according to the fiber insertion marks on the side of the Amplifier Unit, and lower the lock button.



2. Disconnection

Remove the protective cover and raise the lock button to pull out the fiber.

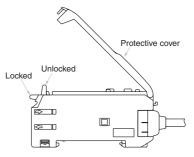

- **Note** To maintain the fiber properties, confirm that the lock is released before removing the fiber.
 - 3. Precautions for Fiber Connection/Disconnection

Be sure to lock or unlock the lock button within an ambient temperature range between $-10^\circ C$ and $40^\circ C.$

Cutting Fiber

Insert a fiber into the Fiber Cutter and determine the length of the fiber to be cut.

Press down the Fiber Cutter in a single stroke to cut the fiber.

The cutting holes cannot be used twice. If the same hole is used twice, the cutting face of the fiber will be rough and the sensing distance will be reduced. Always use an unused hole.

Cut a thin fiber as follows:


1. An attachment is temporarily fitted to a thin fiber before shipment.



2. Secure the attachment after adjusting the position of it in the direction indicated by the arrow.



3. Insert the fiber to be cut into the E39-F4.



4. Finished state (proper cutting state)




Note Insert the fiber in the direction indicated by the arrow.

Connection


Do not pull or press the Fiber Units. The Fiber Units have a withstand force of 9.8 N or 29.4 N maximum (pay utmost attention because the fibers are thin).

Do not bend the Fiber Unit beyond the permissible bending radius given under *Specifications: Amplifier Units* on page 3.

Do not bend the edge of the Fiber Units (excluding the E32-T \Box R and E32-D \Box R).

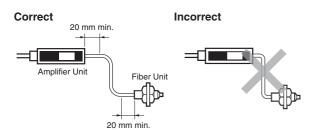


Do not apply excess force on the Fiber Units.





Incorrect

The Fiber Head could be broken by excessive vibration. To prevent this, the following is effective:




Bending Radius

E39-F11 Sleeve Bender

The bending radius of the stainless steel tube should be as large as possible. The smaller the bending radius becomes, the shorter the sensing distance will be.

Insert the tip of the stainless steel tube to the Sleeve Bender and bend the stainless steel tube slowly along the curve of the Sleeve Bender (refer to the figure).

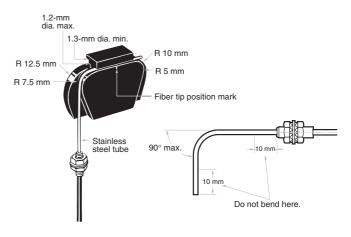


Amplifier Units with Connectors


Mounting

Mounting Connectors

1. Insert the Master or Slave Connector into the Amplifier Unit until it clicks into place.




- 2. Join Amplifier Units together as required after all the Master and Slave Connectors have been inserted.
- Attach the stickers (provided as accessories) to the sides of Master and Slave Connectors that are not connected to other Connectors.



Note Attach the stickers to the sides with grooves.

Removing Connectors


- 1. Slide the slave Amplifier Unit for which the Connector is to be removed away from the rest of the group.
- 2. After the Amplifier Unit has been separated, press down on the lever on the Connector and remove it. (Do not attempt to remove Connectors without separating them from other Amplifier Units first.)



Mounting End Plate (PFP-M)


Depending on how it is mounted, an Amplifier Unit may move during operation. In this case, use an End Plate.

Before mounting an End Plate, remove the clip from the master Amplifier Unit using a nipper or similar tool.



The clip can also be removed using the following mechanism, which is incorporated in the construction of the section underneath the clip.

1. Insert the clip to be removed into the slit underneath the clip on another Amplifier Unit.

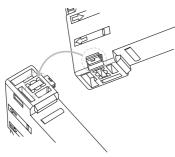

Reflector

Use of E39-R3 Reflector

Use detergent, etc., to remove any dust or oil from the surfaces where tape is applied. Adhesive tape will not be attached properly if oil or dust remains on the surface.

The E39-R3 cannot be used in places where it is exposed to oil or chemicals.


E39-F32 Protective Spiral Tubes

Insert a fiber to the Protective Spiral Tube from the head connector side (screwed) of the tube.



Push the fiber into the Protective Spiral Tube. The tube should be straight so that the fiber is not twisted when inserted. Then turn the end cap of the spiral tube.




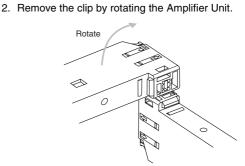


Pull Strengths for Connectors (Including Cables)

E3X-CN11: 30 N max. E3X-CN12: 12 N max.

Secure the Protective Spiral Tube on a suitable place with the attached nut.




Use the attached saddle to secure the end cap of the Protective Spiral Tube. To secure the Protective Spiral Tube at a position other than the end cap, apply tape to the tube so that the portion becomes thicker in diameter.

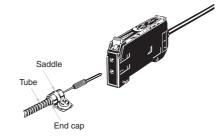

E39-F10 Fiber Connector

Mount the Fiber Connector as shown in the following illustrations.



The Fiber Units should be as close as possible when they are connected.

Sensing distance will be reduced by approximately 25% when fibers are connected.


Only 2.2-mm-dia. fibers can be connected.

Dimensions

Note All units are in millimeters unless otherwise indicated.

Amplifier Units


Amplifier Units with Cables (with Mounting Bracket Attached)

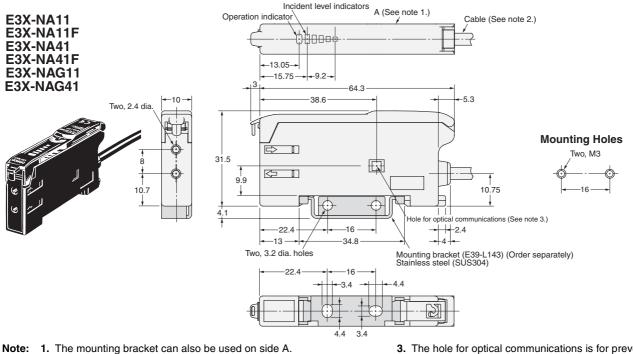

The mounting bracket can also be used on side A.
 With these models, a 4-dia., 3-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used. Standard length: 2 m.

3. The hole for optical communications is for preventing mutual interference. There is no hole for E3X-NA□F models.


Amplifier Units with Cables, Water-resistant Models (with Mounting Bracket Attached)

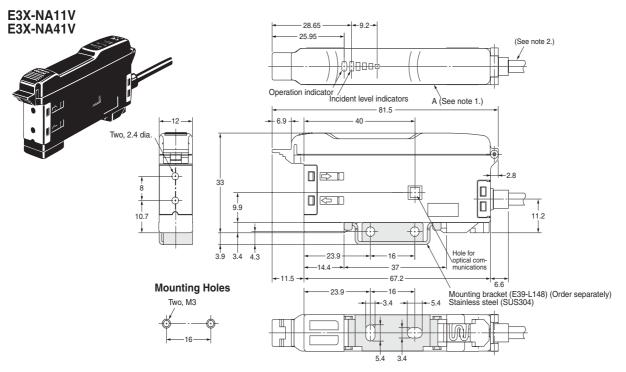


Note: 1. The mounting bracket can also be used on side A.

 With these models, a 4-dia., 3-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used. Standard length: 2 m.


Amplifier Units with Connectors

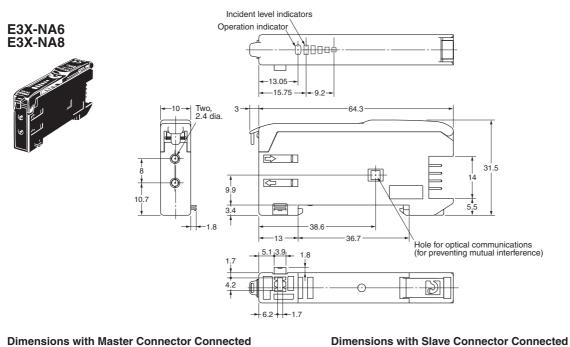




-71 7 -67.5 67.5 64.3 64.3 Í ſ E3X-CN12: 2.6 dia. E3X-CN11: 4.0 dia = 31.5 31.5 Ę \bigtriangledown 1 Π 17.45 1.5 1.5 12,95 12,95 € ┲ Ξ 5 3 1.8 1.8 5.1 30 5139 48 -10 10


Amplifier Units with Connectors, Water-resistant Models (with Mounting Bracket Attached)

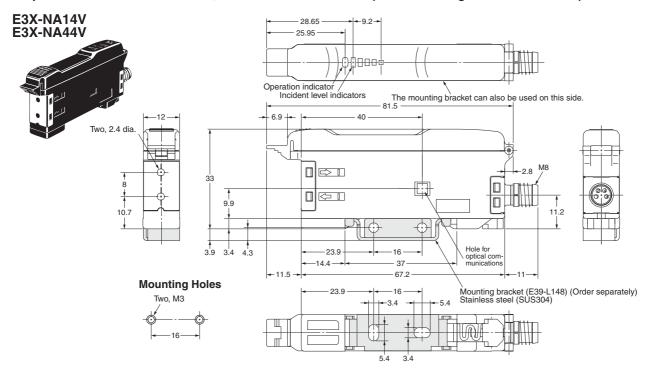

■ Amplifier Unit Connectors

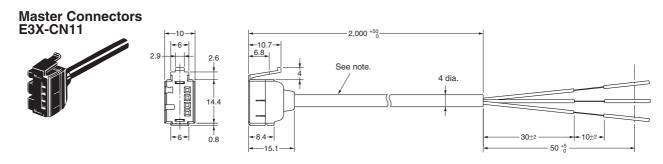


Note: A 4-dia., 3-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used.

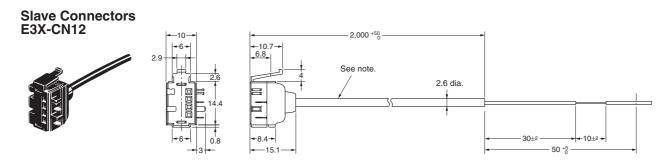

Note: A 2.6-dia., single-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used.


Sensor I/O Connectors

```
Straight Connector (at One End of Cable)
XS3F-M421-402-A (L=2 m)
XS3F-M421-405-A (L=5 m)
```



L-shaped Connector (at One End of Cable) XS3F-M422-402-A (L=2 m) XS3F-M422-405-A (L=5 m)




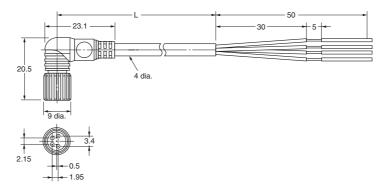

■ Accessories (Order Separately)

Mounting Bracket for E3X-NA , E3X-NA F, and E3X-NAG Models

E39-L143

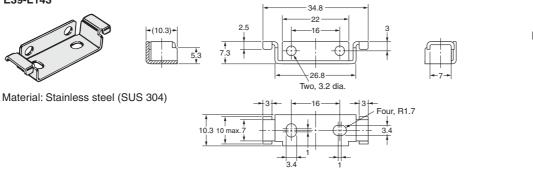

R1.7



Mounting Bracket for E3X-NA V Models


12

4.8

E39-L148



Material: Stainless steel (SUS 304)

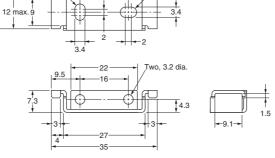







End Plate







READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments.

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL INDIRECT. OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY. In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

SUITABILITY FOR USE

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
 Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment,

- and installations subject to separate industry or government regulations. Systems, machines, and equipment that could present a risk to life or property

Please know and observe all prohibitions of use applicable to the products

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PERFORMANCE DATA

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

COPYRIGHT AND COPY PERMISSION

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. E318-E1-03

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation

Industrial Automation Company

Sensing Devices Division H.Q.

Industrial Sensors Division Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan Tel: (81)75-344-7022/Fax: (81)75-344-7107